

SVP-801

BP-511, BP-512, BP-522, BP-535
NB-2L, NB-2L12, NB-2L14

SVP-802

NB-1L, NB-1LH, NB-3L, NB-4L
NP-500, NP-600, BCD-7, KLIC-7005
S-004E, DBL-18, NP-40(FUJI), LB-

SVP-803

NP-60 (Fuji), NP-120
EN-EL-2, EN-EL-5
K-5001, LI-30B

SVP-804

NP-F550, NP-750, NP-960, QM71, 91
FM-50, 70, 90, FV-50, 70, 100
FF-50, 51,70, 71 BN-V607, V615
FP-50, 70,90 FH-40, 60, 100 VBD-1

SVP-805

D-07S, 08S, 16S, 28S, S-006
D120, 220, 320, DU-07, 14, 21
S-002E VBG 130,260, S602E, BM-7

SVP-806

FC-10, FC-11, FS-11, FD-1, BD-1
FS-21, FS-31, FT-1, FR-1

SVP-807

NP-30 (FUJI), NP-40 (CASIO)
NP-200, DB-L20

SVP-808

NP-400, BLM-1,
EN-EL-1, EN-EL-3, NP-800

SVP-813

BP-780S, BCA-7, S001E,
S003E, NP-BG-1

SVP-816

EN-EL-8, K-7000, LI-40B,
LI-42B, FE-1, NP-20

SVP-818

S005E, 8330, NP-900, NP-70, BCC-12
KLIC-7001, 7002, KLIC-7004, NP-50 (Fuji)

SVP-823

DB-L40, EU-94, SB-L1237, KLIC-7005
BP-760S, NP-1, SB-L0837, NP-40 (FUJI)

SVP-824

NB-5L, NP-700, DB-L30
LH-82, BCD-10, CGR-S007

SVP-825

NP-95, S101E, BP-760S

SVP-830

EN-EL-9, D-Li-1

SVP-831

KLIC-7003, NP-50 (CASIO)
S008E (BCE-10)

SVP-833

EN-EN-11, D-Li-78,
NP-60 (CASIO) SLB-10A

SVP-836

LP-E5, BP-808, 809, 819

SVP-837

NP-70 (CASIO), NP-BK-1, NB-6L
EN-EL-12, D-Li-88, LI-50B

Discontinue Models:

SVP-809, 810, 811, 812
SVP-815, 817, 819, 820, 821, 822,
SVP-827, 828, 829, 832, 835,

SVP-838

NB-7L, LP-E6

SVP-839

NP-100 (CASIO), BLB-13

SVP-840

NP-70 (CASIO), NP-90 (CASIO),
BCF-10, BCG-10, SLB-07A

SVP-841

BN-VG-107, 114, 121, DBL-90
LI-70B, NP-110 (CASIO), NP-BN-

SVP-842

LP-E8, VBG-6

SVP-843

BCH-7, BP-70A, BP-125A
VBK-180, VBK-360

SVP-844 (NEW)

FW-50, VW-VBD-19

SVP-845 (NEW)

NB-9L, NP-120,
DMW-BCJ-13

SVP-846 (NEW)

DMW-BMB-9, EN-EL-14

SVP-847 (NEW)

BLD-10E, BLC-12
EN-EL-15

SVP-848 (NEW)

BP-1310, D-LI-109, D-LI-90

SVP-849

BCK-7, EN-EL-19, BP-110,
NP-130, BP-85A

SVP-850 (NEW)

BLE-9, NB-10L, LP-E10
